Safety Technique

SAFEMASTER C **Multifunctional Safety Timer** UG 6961





Product Description

The multifunctional safety timer UG 6961 provides protection of men and machines by enabling and disabling a safety circuit. This is done by the adjusted time delay function. Simply select 1 out of 5 delay functions with a rotary switch - ready. The adjusted time is safe over the complete setting range. The UG 6961 is available for different safety functions. It has safe delayed and instantaneous contacts.

Circuit Diagram 27 18 27 18 28 A2 ST1 38 A2 ST1 38 K1-K4 M10578 28 48 58 RESIGND ST2 M11126 RESIGND ST 47 48 57 58 UG 6961.02 UG 6961.04

Connection Terminals

Terminal designation	Signal description
A1 +	DC 24 V
A2	0 V
17, 18, 27, 28, 47, 48, 57, 58	Forcibly guided NO contacts for delay contacts
38	Semiconductor monitoring output
GND	Reference potential for Semiconductor monitoring output
S11, S21	Control output
S12, S22, ST1, ST2, RES	Control input

Your Advantage

- Various delay functions adjustable at device:
 - Release delay
 - Release delay retriggerable
 - On delay
 - Fleeting on make / break
 - Delay function settable via potentiometer
- Various safety functions defined:
 - E-Stop
 - Safety gate
 - Two-hand control
 - Safety mat / Safety edge
 - Exclusive or contacts
 - Light curtain
- Manual or auto start
- Protection against manipulation by sealable transparent cover

Features

- According to
 - Performance Level (PL) e and category 4 to EN ISO 13849-1
- SIL Claimed Level (SIL CL) 3 to IEC/EN 62061
- Safety Integrity Level (SIL) 3 to IEC/EN 61508 and IEC/EN 61511
- Acc. to EN 50156-1 for furnaces
- Line fault detection on On-button:
- Manual restart or automatic restart
- With or without cross fault monitoring
- 2-channel
- Forcibly guided output contacts
- Output: max. 4 NO instantaneous semiconductor monitoring output
- LED indicator for operation, delay contects and failure
- As option with pluggable terminal blocks for easy exchange of devices
 - with screw terminals
 - or with cage clamp terminals
- Width: 22.5 mm

Approvals and Markings













Application

Provide an on-delay or off-delay when a activating a safety function. It can be used to protect people and machines in applications with estop buttons, safety gates, light curtains with selftesting (Type 4) acc. to IEC/EN 61496-1, 2-hand controls for presses as well as other production machinery with dangerous closing action (Type III C to EN ISO 13851) and for safety mats, safety edges and tape switches with a max. switching current of 15 mA.

Indicators

Green LED ON:

On, when supply connected

Red LED ERR:

On, at internal error Flashes at external error

Green LED K1/K2 (.02)

e.g. K1-K4 (.04):


On, when relay K1 and K2 (.02) energized, e.g. when relay K1, K2, K3 and K4 (.04) energized

Flashes during time delay


Flashes at external errors in combination


with flashing on LED ERR (see flashing codes)



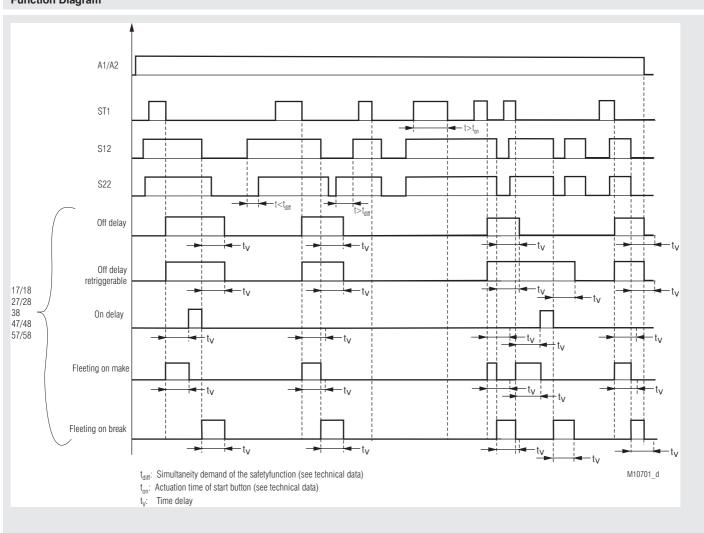

Fault Indication by Flashing Code on K1/K2

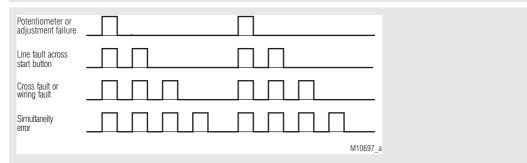

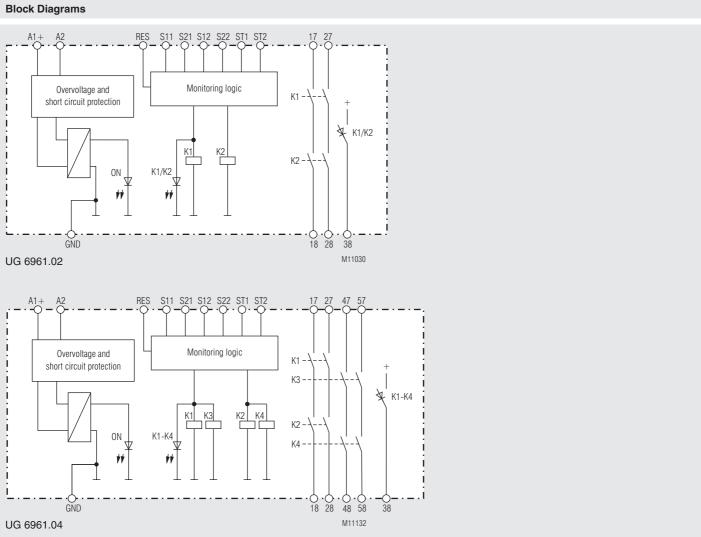

Practical Notes

Operating mode

Manual or auto start is chosen by wiring. On manual start S21 has to be connected to ST1! via an NO push button. For auto start S21 is connected to ST2. If both inputs are connected to S21 the unit goes into safe failure mode. A restart or new start of the device has to be made.

Only an automatic start at safety function two-hand control /3__ is possible.

Line fault detection e.g. monitoring of ON-button

If the On-button pressed more than 3 s the adequate output contacts of the safety function can't be switch. The output contacts can be energized when the On-button pressed again (0.1 s < $t_{\rm ON}$ < 3 s).

A line fault is detected if the On-button more than 10 s is actuated. The output contacts of the adeauate safety function can only be energized with a reset or re-start with on an off switching of power supply.

Reset and external failures:

The reset input is used to reset external failures (application failures or removable external failures as e.g. a line fault on reset button). If the reset signal is connected to the input for more than 3 sec the unit makes a reset. A new reset is only possible when the reset signal had been switched off temporarily.

If an external failure occurs because both input channels of a safety function did not switch on or off within the simultanious time, a reset is only possible if both channels are switched to off state after removing failure cause.

Setting delay mode

On the variant /_0_ the delay mode can be set via rotary switch $t_{\text{\rm Ekt}}$. Possible functions:

t _{Fkt}	Function
1	Release delay
2	Release delay retriggerable
3	On delay
4	Fleeting on make
5	Fleeting on break

Description of the time delay functions

Off delay

If the sensors/switches of the safety function are switched off or an external failure in the safety function is detected, the adjusted time delay is started. After elapse of the delay time the contacts switch off.

Restarting of the output contacts is only possible after the time is fully elapsed.

Off delay retriggerable

If the sensors/switches of the safety function are switched off or an external failure in the safety function is detected, the adjusted time delay is started. After elapse of the delay time the delayed contacts switch off. On before the time is elapsed, or the the external failure is removed and reset and the starting conditions are fulfilled (manual or auto start) the contacts remain switched on.

On delay

If the sensors/switches of the safety function are switched on the adjusted time delay is started. After elapse of the delay time the contacts switch on. If the sensors/switches of the safety function are switched off before the time is elapsed, the time is stopped and the safety contacts remain switched off. When the sensors/switches of the safety function are switched on again then the time delay is started from the beginning.

Practical Notes

Fleeting on make

If the sensors/switches of the safety function are switched on, the contacts are switched on and the adjusted time delay is started. After elapse of the delay time the contacts switch off.

If the sensors/switches of the safety function are switched off before the time is elapsed the safety contacts are also switched off.

Fleeting on break

If the sensors/switches of the safety function are switched off or an external failure in the safety function is detected, the safety contacts are switched on and the adjusted time delay is started.

After elapse of the delay time the contacts switch off. If the sensors/switches of the safety function are switched off before the time is elapsed the safety contacts are also switched off again.

Adjusting the time delay

With rotary switch t_{max} the time range for the delayed contacts is selected. With rotary switch t the time is adjusted within the selected range in 10 % steps

Example: required time = 0.8 s

1. Example:

 $t_{\text{max}} = 1 \text{ s}$; $t = 0.8 \geq t_{\text{v}} = t_{\text{max}} \text{ x } t = 1 \text{ s x } 0.8 = 0.8 \text{ s}$

2. Example:

 $t_{\text{max}} = 2 \text{ s}$; $t = 0.4 \geq t_{\text{v}} = t_{\text{max}} \text{ x } t = 2 \text{ s } \text{ x } 0.4 = 0.8 \text{ s}$

Repeat accuracy

The repeat accuracy of the delayed contact depends on different factors:

Repeat accuracy t_{M} = system reaction time) \pm 1 % of t_{M}

1) Pick up or drop off time depending on delay mode

Operating Potentiometer

Poti "t_{Fkt}" Adjustment of delay function

Poti "t_{max}" Adjustment of time range

Poti "t" Fine adjustment at time range

Technical Data Input Nominal voltage U_N: DC 24 V 0.8 ... 1.1 U_N Voltage range: Nominal consumption: typ. 1.9 W Short-circuit protection: Internal PTC Overvoltage protection: Internal VDR Duty-cycle ON button: $0.1 \text{ s} < t_{EIN} < 3 \text{ s}$ **Duty-cycle Reset button:** Safety function

Typ. 8 mA at U_N

Technical Data		
Switching capacity		
to AC 15	3 A / AC 230 V	IEC/EN 60947-5-1
to DC 13		
contacts 17/18, 27/28:	2 A / DC 24 V	IEC/EN 60947-5-1
contacts 47/48, 57/58:	3 A / DC 24 V	IEC/EN 60947-5-1
to DC 13		
contacts 17/18, 27/28:	4 A / DC 24 V at 0.1 Hz	
Electrical life		
at 5 A, AC 230 V cos φ = 1:	> 1.5 x 10 ⁵ switching cycles	
Perm. operating frequency:		•
UG 6961.02:	Max. 1800 switching cycles / h	
UG 6961.04:	Max. 360 switching cycles / h	
Short circuit strength		
max. fuse rating:	6 A gG / gL	IEC/EN 60947-5-1
Mechanical life:	10 x 10 ⁶ switching cycles	
Semiconductor monitoring	output	
(not safety):	Max. 50 mA DC 24 V, plus switching	
	(see current limit curve)	
General Data		
General Data		

Output

Contacts

UG 6961.02 2 NO contacts UG 6961.04 4 NO contacts The NO contacts can be used for safe braking.

Safety mat / safety edge (4)

control current via S12, S22:

Min. voltage on terminals

safety edge contact resistance: 1000 Ω switching current at short circuit: Typ. 15 mA at U_N

S12, S22 when relay activated: DC 10 V

max. permitted

Light curtains (8)

Delay t_v 8 time ranges in one unit (seconds or ranges at /_ _0: minutes) settable via rotational switch 1.0 ... 10 0.1 ... 1 0.2 ... 2 3.0 ... 30 0.3 ... 3 10 ... 100 0.5 ... 5 30 ... 300 other times on request fixed at /_ _1: Seconds or minutes

1, 2, 3, 5, 10, 30, 100, 300 other times on request Time setting in

10% steps of max. time range value Repeat accuracy:

See formula Thermal current I,,: Max 8 A

(see quadratic total current limit curve)

Safety function E-Stop (1) (6), Safety gate (2) (7), Exclusive or contacts (5)

Start up at U_N: < 65 ms Release delay at U_N and disconnecting the supply: < 40 msRelease delay at U, and disconnecting S12, S22: < 60 ms

Simultaneity demand: < 3 s Two-hand control (3) Start up at U_N: < 110 ms

Release delay at U_N and disconnecting the supply:

< 40 ms

Release delay at U, and

disconnecting S12,S22: < 60 ms Simultaneity demand: < 0.5 sSafety mat (4)

< 85 ms

Start up at U_N: Release delay at U_N and

disconnecting the supply: < 40 ms Release delay at U_N and

disconnecting S12,S22: < 60 msLight curtains (8) < 35 ms

Start up at U_N: Release delay at U_N and

disconnecting the supply: < 40 ms

Release delay at U, and

disconnecting S12,S22: < 25 ms Simultaneity demand: < 1 s

Temperature range

Operation: - 25 ... + 60 °C (see quadratic total current limit curve)

At an altitude of > 2000 m the maximum permissible temperature reduces by 0.5°C / 100 m

Continuous operation

EN 55011

Storage: - 40 ... + 85 °C

Altitude, Clearance and creepage distance

EMC

rated impulse voltage /

IEC 60664-1 pollution degree:

 \leq 2000 m

 $> 2000 \text{ m up to} \le 4000 \text{ m}$ 4 kV / 2 2.5 kV / 2

Limit value class B

IEC/EN 61326-3-1, IEC/EN 62061

Interference suppression: Degree of protection

Nominal operating mode:

Housing: IP 40 IEC/EN 60529 IP 20 Terminals: IFC/FN 60529

Thermoplastic with VO behaviour Housing: according to UL subj. 94

Vibration resistance: Amplitude 0,35 mm

Frequency 10 ... 55 Hz,IEC/EN 60068-2-6 25 / 060 / 04 Climate resistance: IEC/EN 60068-1

Terminal designation: EN 50005

Wire fixing: captive slotted screw or cage clamp terminals

IEC/EN 60715 Mounting: DIN rail

Weight: Approx. 210 g

Dimensions

Width x height x depth:

22.5 x 110 x 120.3 mm UG 6961 PS: UG 6961 PC, PT: 22.5 x 120 x 120.3 mm

21 UG 6961 / 22.06.22 en / 588A

UL-Data

The safety functions were not evaluated by UL. Listing is accomplished according to requirements of Standard UL 508, "general use applications"

Ambient temperature: - 15 ... + 55 °C

Altitude: ≤ 2000 m

Switching capacity for .02: Pilot duty B300, R300

8A 250Vac Resistive or G.P.

8A 24Vdc Resistive

Switching capacity for .04

Ambient temperature 55°C Pilot duty B300, R300

5A 250Vac Resistive or G.P.

5A 24Vdc Resistive

Ambient temperature 40°C: Pilot duty B300, R300

8A 250Vac Resistive or G.P.

8A 24Vdc G.P.

Wire connection:: 60°C / 75°C copper conductors only PS-terminal: AWG 28 - 12 Sol/Str Torque 0.5 Nm

PC-terminal: AWG 24 - 12 Sol/Str PT-terminal: AWG 24 - 16 Sol/str

Info

Technical data that is not stated in the UL-Data, can be found in the technical data section.

Standard Type

UG 6961.02PS/100/61 DC24V 300 s
Article number: 0065425

• Safety function: E-stop

• Delay function: Adjustable


• Time delay: Adjustable

• Output: 2 NO contacts

• Nominal voltage: DC 24 V

• Width: 22.5 mm



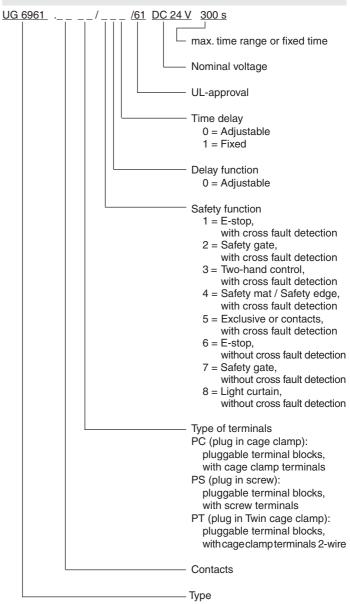


Troubleshooting

Failure	Potential cause
LED "ON" does not light up	- Power supply A1+/A2 not connected
LED "ERR" flashes in relation 1:1	- Under- or overvoltage (check power supply A1+/A2)
LED "ERR" flashes in relation 4:1	- external failure (see flashing code)
LED "ERR" continuously on	- system error (if cannot be removed after restart unit must be replaced)

Maintenance and Repairs


- The device contains no parts that require maintenance.
- In case of failure, do not open the device but send it to manufacturer for repair.


Characteristics

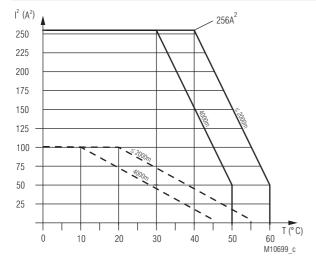

Device free-standing. Max. current at $60^{\circ}\text{C}(\le 2000\text{m})$ or 50°C (4000m) over 4 contact path $=3,5\text{A} \triangleq 4x3,5^2\text{A}^2 = 100\text{A}^2$

Device mounted without distance heated by — — devices with same load. Max. current at $55^{\circ}\text{C}(\leq 2000\text{m})$ or 45°C (4000m) over 4 contact path = $1\text{A} \triangleq 4\text{x1}^2\text{A}^2 = 4\text{A}^2$



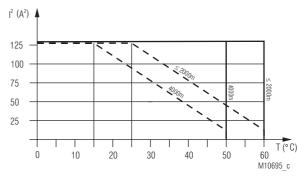

Device free-standing.


Max. current at 60° C (≤ 2000 m) or 50° C (4000m) over 2 contact path = $8A \stackrel{\frown}{=} 2x8^{2}A^{2} = 128A^{2}$

Device mounted without distance heated by devices with same load. Max. current at $60^{\circ}\text{C} \ (\le 2000\text{m}) \text{ or } 50^{\circ}\text{C} \ (4000\text{m}) \text{ over}$ 2 contact path $= 2,5\text{A} \ \widehat{=} \ 2x2,5^2\text{A}^2 = 12,5\text{A}^2$

$$\Sigma \; I^2 \! = I_1^2 + \, I_2^2$$


 I_1, I_2 - Current in contact paths

Quadratic total current limit curve output contacts UG 6961.02. From an altitude of > 2000 m the curve is adjusted by - 0,5 $^{\circ}$ C / 100 m (see example for 4000 m).

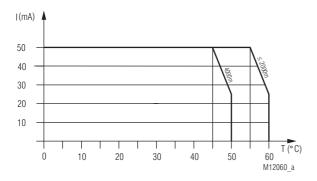

Current limit curve semiconductor monitoring output From an altitude of > 2000 m the curve is adjusted by - 0,5 $^{\circ}$ C / 100 m (see example for 4000 m).


Application Examples with safety function

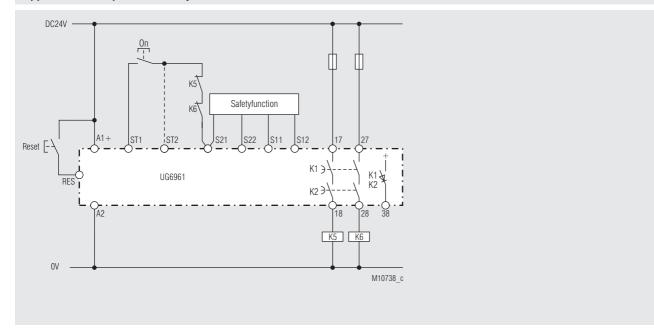


Safetyfunction: see below, Manual-Start (for automatic start make a bridge to ST2 instead of ON button).

Delay function: release delay (1)


Contact reinforcement by external contactors. The correct function of the external contactors is monitored by connecting the NC contacts into the start circuit (manual start: terminals S21-ST1, auto start: S21-ST2).

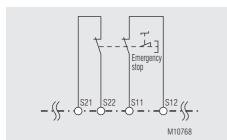


Fct.: E-stop (1), with cross fault detection SIL 3, PL e, Cat. 4

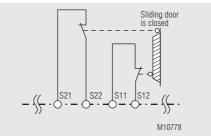


Fct.: Safety gate (2), with cross fault detection SIL 3, PL e, Cat. 4

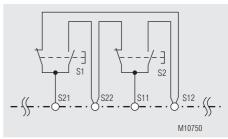


Fct.: Two-hand control (3), with cross fault detection SIL 3, PL e, Cat. 4 Type III C to EN ISO 13851

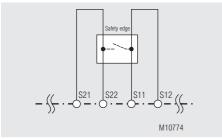


Fct.: Safety mat / Safety edge (4), with cross fault detection SIL 3, PL e, Cat. 4

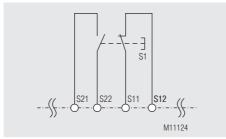


Fct.: Exclusive or contacts (5), with cross fault detection SIL 3, PL e, Kat. 4

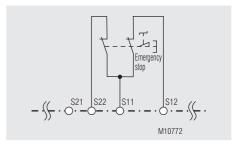

Fct.: E-Stop (6), without cross fault detection SIL 3, PL e, Cat. 4 1)

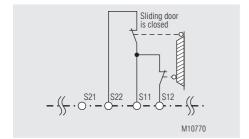

Fct.: Safety gate (7), without cross fault detection SIL 3, PL e, Cat. 4 1)

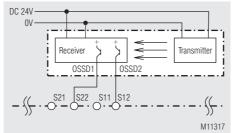

Fct.: Light curtain (8), without cross fault detection SIL 3, PL e, Cat. 4 ²⁾

- To achieve the stated safety classification the wiring has to be done with crossfault monitoring.
- 2) To achieve the stated safety classification light curtains with selftest (type 4) according to IEC/EN 61496-1 have to be used.